

INSTRUCTION MANUAL TABLE GAS STOVE

MODEL NJ-60 / NJ-60SD

ENGLISH
DEUTSCH
FRANCAIS
ITALIANO
БЪЛГАРСКИ



**Read the manual carefully before use, and
keep it for future reference**

Note: Picture(s) or drawing(s) be showed in this manual is for reference only,
the manufacture properly make change or modification without prior
notification.

Instruction manual

Please read the instruction manual carefully before using and keep it for future reference and maintenance. This manual contains important message, includes safe operation and special notes, structure diagram, main technical data, installation instruction, operation steps and adjustment ways, clean and maintenance, and troubleshooting.

Safe operation and special notes

1. Make sure that the type of gas you are using matches the label on the side of the appliance.
2. The appliance must be installed in a well ventilated area - for model NJ-60SD. The NJ-60 gas stove does not have a safety device (if the flame goes out) and should only be used outdoors.
Be sure to keep the appliance and the gas bottle away from flammable materials.
3. If there is a gas odor, stop the gas flow, open the windows and ventilate the area very well. Do not use electricity or electrical appliances to avoid accidents until the problem is resolved.
4. If the burner accidentally goes out during operation, stop the gas from the cylinder to prevent gas from leaking. (for model NJ-60)
5. It is not recommended to be used by children and people with mental and physical disabilities without supervision.
6. For greater safety when using the appliance and to prevent gas leakage, replace the gas hose annually.
7. Stop the gas flow from the bottle after each use.
8. When the appliance is equipped with protection (NJ-60SD gas cooker), when the flame is suddenly extinguished, it stops gas flow to the burner and prevents gas from flowing into the room.


Main technical data

GB	Gas stove		
Model	NJ-60		
Gas type	LPG		
	G30/31	G30	G30
Category	I3+ (28-30/37)	I3B/P (30)	I3B/P (50)
Pressure	28-30/37mbar	30mbar	50mbar
Destination countries	BE, CH, CZ, ES, FR, GB, IE, IT, SI, SK, PT	DK, FI, BG, GR, HU, NL, NO, PT, SE, SI	AT, DE
Nominal input	Right burner: 4.3kW(339g/h) Left burner: 3.4kW(268g/h)		
FFD	No		
Warning! This appliance shall be installed in accordance with the regulations in force and used only outdoor. Read the instructions before installing or using this appliance.			

GB	Gas stove		
Model	NJ-60SD		
Gas type	LPG		
	G30/31	G30	G30
Category	I3+ (28-30/37)	I3B/P (30)	I3B/P (50)
Pressure	28-30/37mbar	30mbar	50mbar
Destination countries	BE, CH, CZ, ES, FR, GB, IE, IT, SI, SK, PT	DK, FI, BG, GR, HU, NL, NO, PT, SE, SI	AT, DE
Nominal input	Right burner: 4.3kW(339g/h) Left burner: 3.4kW(268g/h)		
FFD	YES		
Warning! This appliance must be installed in accordance with the regulations in force and used only in a well-ventilated area.			

Installation instruction


1. After opening the carton, fix four legs on the four square yard as the diagram shows.
2. Clean the labels, put the trivets on correct positions.
3. Check and adjust the burner cap and burner till match perfectly. As follow drawing shows:
4. Take off the dustproof cap, put on the special gas hose to the position, where marked by red line, then clamp the hose tightly by clip.
5. Check leakage, turn the knob to “ off ” position, put soap water on both connectors of gas hose, then open the gas valve, if there have air bubbles, you have to fix it again.
6. The distance between the products be put around and stove should be more than 15cm, there should be more than 100cm space above the stove.
7. The distance between stove and cylinder should be around 1m, the proper length of inlet gas hose is 1m-2m. One side of the hose connect the cylinder, the other side connect the gas inlet hole of stove, the hose can not contact the stove and thrill through the bottom of the stove, can not bend it forcedly.
8. Both left and right burner of the stove can be used to heat convex bottom utensils or pans (cookers), proper diameter of convex bottom utensil is 32cm, proper; diameter of pan is between 26-30cm, the weight of food should less than 10kg; the middle burner fits in with the pans with the diameter of 9-12cm, and the weight of food should be less than 1kg. the cooker should be put even not deflected.

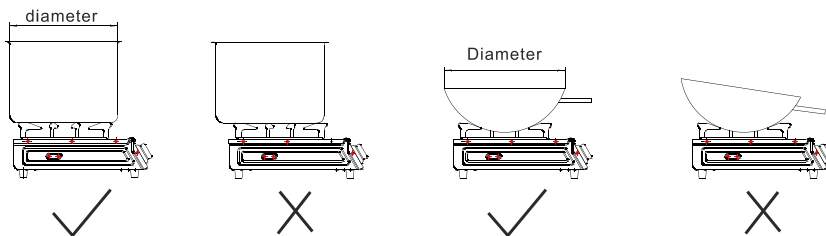

9. It is recommended installing range hood above the stove.

Operation steps and adjustment

1. Make sure all knobs on the “off” position, then open the main gas valve.
2. Press the knob down by 3mm as the follow drawing shows, then turner it counter-clockwise until you hear ignition click, ignite the burner, and keep push the knob for 5 seconds, then release the knob. (It may fail to ignite at the first time because of there is air in the hose, you have to repeat this procedure)
3. Adjustment: the flame can be adjusted by turn the knobs slowly. (As drawing 3 shows)

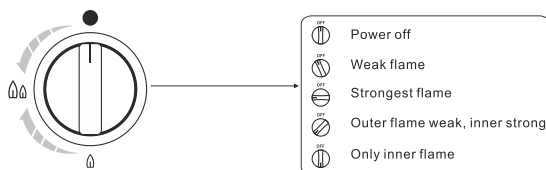

(Drawing 3)

4. Flame out: turn the knobs clockwise to “off” position as drawing 3 shows, the flame will be extinguished, then close the main gas valve.


Flame out protection (Only for model NJ-60SD)

The stove adopt the flame out protection device (FSD), the gas will be cut within 30 seconds once accident flame out occurs, it will help to make you safe.

Clean and maintenance

1. Surface maintenance: wipe the surface by dishcloth, which with medium scour, then dry thoroughly with a dry cloth.
2. Burner cap maintenance: in order to keep good burning condition, it is better to take the burner cap out and clean it by brush (or other tools) weekly.

Components list of 2 burner

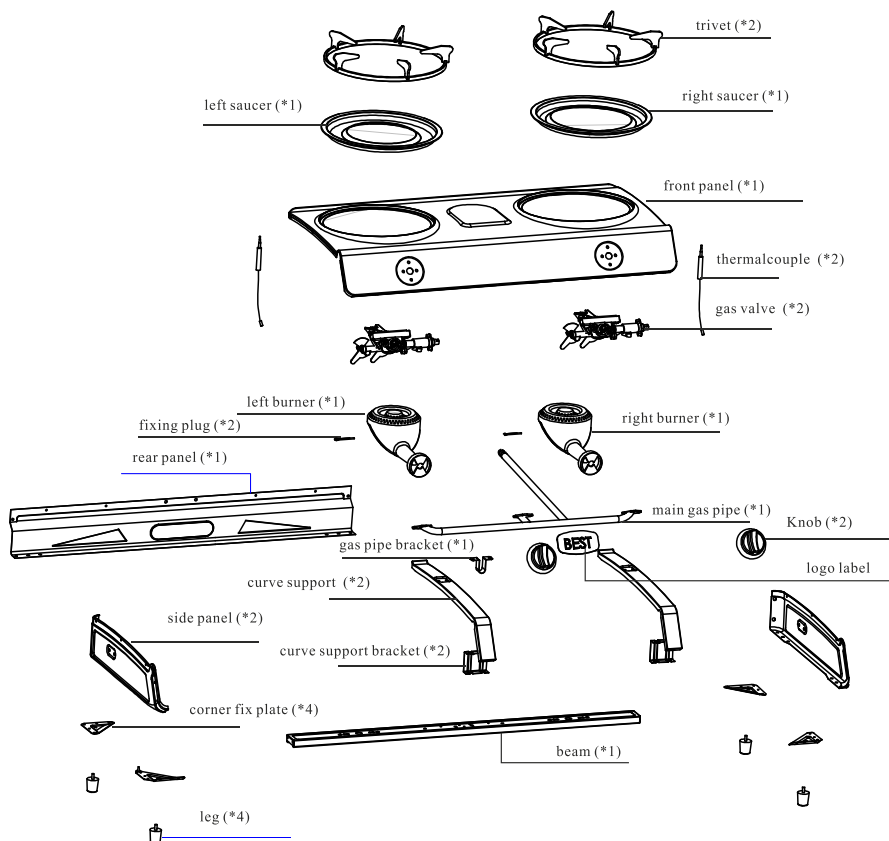

Troubleshooting

Problem	Reason	Solution
The burner does not ignite	The main gas valve is not opened	Open the main gas valve
	The hose is bent	Fix the hose
	There is air inside the hose	Repeat ignition several times
Yellow flame	Jet is blocked	Clean the jet
	Not enough gas in the gas cylinder	Change the gas cylinder
Abrupt extinction in the ignition or very low flame from the burner	Not enough pressure	Check that there is gas in the bottle and that the gas flow is released
The burner goes out after ignition (model NJ -60SD)	The button is not held long enough, protection is switched on	Hold the knob for about 5 seconds on ignition to warm up the protection.

Made for Fontron Ltd, Bulgaria

www.fontron.com

Distributor: NJ Commerce Ltd, UK

www.nj-commerce.co.uk