



1 Press the control knob down to release the gas flow to the heater. The control knob needs to be at the first panel position when you first light up the heater.



2 While the control knob is pressed down, push down the piezo lighter ignition to start-up the first panel. Keep pressed the control knob for 5-10 seconds before you release it when you first light up the heater.



3 Press and turn the control knob to the second panel position to light up the panel on the left.



4 Press and turn the control knob to the third panel position to light up the panel on the right.



5 To turn of the heater, turn the control knob back to the pilot light position and then stop the gas flow from the gas cylinder valve directly. The pilot light will stay one for a few seconds and then it will go off. This is a precaution measure to make sure that all the gas in the pipes has burned off and is safe to be stored.

PLEASE NOTE:

If the heater does not ignite the first time, re-do steps 1 & 2 from the ignition procedure until the first panel lights up, especially when you are using the heater for the first time.

This is needed as this will ensure that the gas has built up inside the pipes of the heater.