

Instruction Manual

Electrical Grill

Model: AG-2001

1. Metal Grill

Grill Surface: Suitable for making burgers, sliced meat, meat rolls, vegetables, kebabs, fruits etc.

Smooth Surface: Suitable for making cheesecakes, all sorts of pies, rice cakes, sweet potatoes. It can also be used for heating up drinks or even making coffee.

2. Bottom Grill

You can place a small pot with food on the bottom grill for slow cooking or to heat up food. You can also defrost food or heating up cheese (brie).

3. Handle


While you remove the grill, hold tight the handle in order to avoid getting burned on the hot surface.

Safety Points

1. Make sure that the power supply is the same to the one stated on the label of the Grill.
2. Clean the BBQ Grill and the accessories before using the appliance.
3. A strange odor may be detected when you turn on the appliance for the first time, and you can even see partial smoke, this is completely normal as it is brand new. For that reason make sure that you leave the BBQ Grill to heat up without food for 5 minutes when using it for the first time.
4. Connect the appliance to the power supply by plugging it into the electricity chain, the Indicator light will turn on, turn the control knob (thermostat) to position MAX. You can use the control knob to regulate and choose the preferred temperature for cooking.
5. Before cleaning the appliance, PLEASE MAKE SURE that the Plug is out of the POWER SOCKET in order to avoid injuries, let the appliance cool down for a couple of minutes before cleaning. In order to avoid damaging the appliance or any of the parts and accessories please follow this steps:
 - Do not clean them with metal utensils, corrosive substances and substances that contain abrasive parts.
 - Do not slice and cut food on the appliance or any of the parts and accessories.
6. Do not immerse the Appliance into water directly.
7. The power supply cord must not be in contact with the appliance when operating with it.
8. The appliance must be plugged into earthed power socket.
9. Keep children away when operating with the appliance.
10. When using the smooth surface of the BBQ Grill make sure that you protect the surface from direct scratches made from the pots that you use.

WARNING

- ❖ Always unplug the appliance from the power supply socket if not in use.
- ❖ Do not let children operate with the appliance, without direct supervision from an adult, in order to avoid injuries
- ❖ Make sure that the appliance is placed on a firm leveled surface.
- ❖ Make sure that there are no flammable liquids anywhere near the appliance.
- ❖ Do not try to fix or alter the appliance, please call your supplier for service.
- ❖ If you use the appliance in any other way than the one stated in the instruction manual it will lead to malfunctioning of the appliance and the supplier/manufacturer will not be responsible.

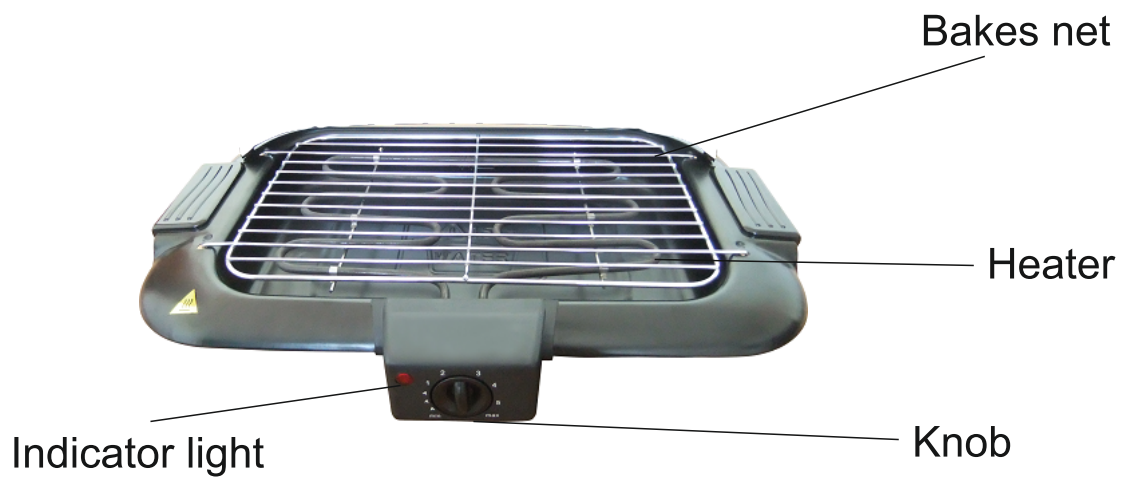

DISPOSAL

Please consider our environment

Separate the packaging materials for disposal as required by your local waste disposal regulations.

Cardboard and paper belong in the waste paper collection, plastic in the recycling collection.

When you wish to dispose of the appliance, remove the cable and dispose it in an environmentally friendly way (e.g. recycling plant).



Please read these instructions carefully before using.

Please keep them in a safe place for future reference.