

Instruction Manual

CONTACT GRILL
MODEL: ACG-2200

PLEASE READ CAREFULLY THIS INSTRUCTION MANUAL

Important safety instructions

1. Please read the whole instruction manual
2. Do not touch the hot surface, please use protective gloves.
3. Do not immerse the power cord of the appliance into water or any other substances in order to avoid injuries.
4. Strict supervision is required when the appliance is used by children or near children.
5. Unplug the appliance from the power supply socket when not in use or when you are cleaning it. Wait for a couple of minutes after you turn off the appliance in order to cool down, before you remove parts, service it or cleaning it.
6. Do not use the appliance if it is with damaged cord, or is malfunctioning.
7. Using unregulated by the manufacturer accessories or parts is hazardous and may lead to series injuries or even death.
8. Make sure that the power cord does not touch the hot surface or it is not hanging over the edge of the table.
9. Do not place the appliance near other heat sources.
10. Increased awareness is required when you are moving the appliance and it has hot cooking oil or other hot substances.
11. Always plug the power cord into the appliance first before you plug the cord into the power socket. In order to turn it off, turn the control knob to position "OFF" and after that unplug the power cord from the power socket.
12. Always plug the appliance in a earthed power socket.
13. When the plate is working, be careful and make sure that it is not near flammable liquids and materials (curtains etc.) in order to avoid fire or serious injuries.
14. Be careful when you open the lid not to get burned as it may let out some steam at first.
15. When you use the appliance for a long time always make sure that the cooking oil that you use will not overflow out from the plate.
16. We recommend that you place the appliance on a heat-resistant surface or it may cause deformation to the appliance.

Instructions for the power cord:

1. A short power cord is given in order to avoid tripping or embrangle.
2. You can use power extensions with safety precautions if necessary.
3. If you use power extension make sure that:
 - The power supply is the same as the one given by the manufacturer
 - Safety precautions need to be established when using power extensions in order to avoid children tripping or pulling the cord.

How to use the appliance:

Use of the appliance indoors and outdoors

1. When using the appliance outdoors without its stand you must ensure that you place it on a leveled, firm and smooth surface. We recommend using some sort of heat-resistant material to be laid down between the appliance and the surface as high temperatures can cause deformation of the appliance.
2. Make sure that the control knob of the temperature is on position "OFF" and it is plugged into the thermostat. Plug it in 220-240V AC power socket.
3. When ready, turn the control knob to the desired temperature. The indicator LED lamp for the temperature will turn on, when this LED lamp turns off this means that the appliance has reached the preferred and set temperature.

NOTE: During cooking time the indicator LED lamp will turn on and off constantly meaning that the temperature is kept at the desired level that you have set.

4. It is highly recommended that you use wooden utensils when cooking in order to avoid scratches on the cooking plate. Do not slice or cut on top of the cooking plate.
5. After using the appliance, turn the control knob to position "OFF" and after that unplug the appliance from the power supply. Leave the appliance to cool down before you clean it.\

Specifications: 220-240V, 50Hz/1820-2150W

Warning:

- Do not place the appliance near other heat sources
- Please make sure that you use carefully the control knob as incorrect use may lead to malfunctioning. Do not use the appliance if the control knob is broken or malfunctioning.

How to clean the appliance:

After use:

1. Unplug the power cord from the power socket and remove the cord from the appliance
2. Leave the appliance for a couple of minutes to cool down.
3. Clean the appliance and lid with warm soupy water using only soft sponge or cloth towel.
4. After cleaning make sure that there is no more substance left on the appliance.

Warning:

- Always unplug the appliance before cleaning or moving.
- Do not use abrasive substances for cleaning.
- Do not place the thermostat or the power cord into the washing machine
- Do not immerse the power cord nor the thermostat into any kind of substances.
- Do not immerse the appliance into water.

Warning: The appliance will turn off if the hot plate is not placed the right way in order to avoid injuries. Please make sure that the hot plate (tray) is placed correctly.



DISPOSAL

Please consider our environment

Separate the packaging materials for disposal as required by your local waste disposal regulations.

Cardboard and paper belong in the waste paper collection, plastic in the recycling collection.

When you wish to dispose of the appliance, remove the cable and dispose it in an environmentally friendly way (e.g. recycling plant).