

OLD

BACK PAGE

FOLD

TROUBLESHOOTING:

| Problem<br>Cause                | No Ignition | No Burning | Unstable<br>Flame | Uneven<br>Flame | Slow<br>Burning | Gas Smell | Stopped<br>Working<br>While in Use | Continued<br>Burning | Solution                                        |
|---------------------------------|-------------|------------|-------------------|-----------------|-----------------|-----------|------------------------------------|----------------------|-------------------------------------------------|
| Lack of fuel                    | ●           | ●          |                   |                 | ●               |           | ●                                  |                      | Replace Cartridge                               |
| Piezo plug dirty                | ●           |            |                   |                 |                 |           |                                    |                      | Clean spark point                               |
| Dirty burner                    | ●           | ●          | ●                 | ●               | ●               |           |                                    |                      | Clean burner                                    |
| Cartridge misaligned            | ●           | ●          | ●                 |                 | ●               | ●         |                                    |                      | Reset correctly                                 |
| Dirty burner or empty cartridge | ●           | ●          |                   | ●               | ●               |           |                                    |                      | Request for inspection/service                  |
| Faulty knob mechanism           | ●           |            |                   |                 |                 | ●         |                                    | ●                    | Request for inspection/repair                   |
| Internal gas pressure too high  |             |            |                   |                 |                 |           | ●                                  |                      | Cool down gas                                   |
| Safety device activated         | ●           |            |                   |                 |                 |           |                                    | ●                    | Request for inspection/service                  |
| Improper setting of spark point | ●           |            |                   |                 |                 |           |                                    |                      | Set spark point to 2mm (5/64") away from burner |

Due to continual development, specifications are subject to change without notice.

SAFETY TIPS:

DO'S

- Turn gas off at ignition knob after use.
- Check that burner is **fully** extinguished before disconnecting the gas container.
- Remove the gas cartridge when not in use.
- Change the gas container outside and away from people.
- Check the **seals** before connecting a new gas container to the appliance.
- Always remove the cooker from the carry case prior to use.
- Keep children away from this appliance.
- Make sure there is adequate ventilation under the unit.
- Only operate on flat, horizontal surfaces.
- Use the cooker in cool places or in the shade. Keep the cartridge compartment out of direct sunlight.
- Always check the gas cartridge position inside the compartment for leaks. If a leak occurs, turn off the supply and remove the gas cartridge.

CARE AND CLEANING:

- The outside of the cooker can be wiped clean with a mild solution of dishwashing detergent and finished off with a dry cloth. Do not use abrasive pads.
- The drip pan can be washed thoroughly. Always dry after washing.
- We recommend the burner head be cleaned by gentle scrubbing with a dry brush at least annually. Ensure that the burner ports are free of any obstructions.
- Occasionally clean the point of the piezo plug with a hard brush or file.

KEEP THIS APPLIANCE AWAY FROM COMBUSTIBLE MATERIALS

MINIMUM CLEARANCES: REAR 600mm - SIDE 600mm - TOP 500mm

Gas consumption: 2X2.3Kw (166g/h)

Injector Size: 0.56mm

DONT'S

- DO NOT OPERATE IN AN ENCLOSED AREA WITHOUT VENTILATION.
- DO NOT operate in a boat, caravan or tent.
- DO NOT modify this appliance.
- DO NOT use the cooker in sand or on gravel surfaces.
- DO NOT move the cooker while it is lit.
- Avoid using the cooker in very windy conditions.
- DO NOT use a cooking pan that is smaller than 14cm and larger than 19cm in diameter.
- DO NOT use appliance as a room heater or clothes drier.
- DO NOT place articles on or against this appliance.
- DO NOT place chemicals or flammable materials, or spray aerosols near this appliance.

FRONT PAGE

# Double Burner Gas Cooker

## BDZ-268S

2 X 2.3KW (166g/h)

Rotary piezo ignition

Pressure sensing safety shut-off device

Convenient storage/carry case

- Only for outdoor use
- Uses standard butane cartridge
- For outdoor use only



**WARNING**

only for outdoor use . CARBON MONOXIDE HAZARD - THIS APPLIANCE CAN PRODUCE CARBON MONOXIDE WHICH HAS NO ODOUR. USING IT IN AN ENCLOSED SPACE (FOR EXAMPLE, CARAVAN, TENT, CAR, MOBILE HOME) MAY CAUSE DEATH.

**DO NOT** USE OVERSIZED COOKING DEVICES (Minimum 14cm, Maximum 19cm Diameter ).

**DO NOT** USE AS A SPACE HEATER OF FOR ANY PURPOSE OTHER THAN COOKING.

**Important:** Retain these instructions for future use.

FOLD

FOLD

## IMPORTANT

Read these instructions for use carefully. Familiarise yourself with the appliance before connecting it to its gas container. Keep these instructions for future reference. The Butane gas cartridge certified to EN 417 or equivalent. It may be hazardous to attempt to fit other types of gas containers.

Don't remove any transit protection material.

## TO START

### Inserting the gas cartridge

1. Turn the Ignition Knob to 'OFF' and set the Cartridge Lock Lever to 'UNLOCK'. (Fig. 1)

*Note: If the Ignition Knob is 'ON' the gas cartridge cannot be loaded into the cooker.*

2. Open the Cartridge Cover: slide the gas cartridge, top end first and with its notch up, into the compartment. Align the notch with the loading guide in the compartment. (Fig. 2)

Check that the seals between the appliance and the gas container are in place and in good condition before connecting the gas container.

- DO NOT use this appliance if it has damaged or worn seals.
- DO NOT use this appliance if it is leaking, damaged or does not operate properly.

3. Push the Cartridge Lock down to 'LOCK' in one firm motion (Fig. 3).

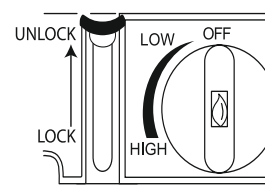


Fig. 1

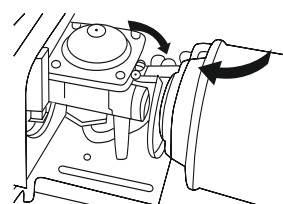


Fig. 2

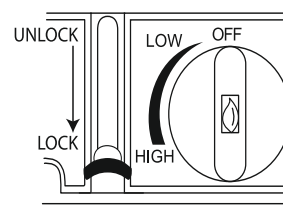


Fig. 3

## LIGHTING THE COOKER

1. Turn the knob anti-clockwise past the 'HIGH' position until a click is heard.
2. If the burner fails to light, immediately turn the Ignition Knob to the 'OFF' position and repeat Step 1.

## TO ADJUST HEAT

1. Flame can be controlled by turning the Ignition Knob between the 'LOW' and 'HIGH' position.

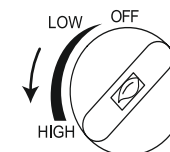


Fig. 4

## TO SHUT OFF

1. Turn the Ignition Knob to 'OFF' to shut off fuel supply (Fig. 5). Wait until the flame is fully extinguished before performing the next step.
2. Raise the Cartridge Lock Lever to 'UNLOCK' and remove the gas cartridge from the compartment.

*Note: Do not leave the gas cartridge inside the unit when not in use.*

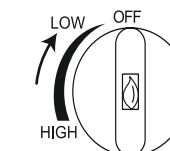


Fig. 5

- The cartridge may be disconnected even if some gas remains.
- Check the contents by shaking and listening for the liquid gas.

Gas containers shall only be changed in a well ventilated location, preferably outside, away from people and way from sources of ignition; such as naked flames, pilot flames, electric heaters/ equipment.

If there is a leak on your appliance (smell of gas) and you cannot stop the gas flow, remove the appliance to a well ventilated location away from any ignition source. Only check for leaks outdoors using soapy water. DO NOT try to detect leaks using a flame.

This appliance must only be serviced by an authorised person.


## AFTER USE

1. Replace the cap on the gas cartridge after removing it from the unit. Store upright in a cool dry place.
2. Make sure the burner is cool to touch before packing unit away.
3. **DO NOT** store the cartridge near other flammables.  
**DO NOT** store the cartridge near sources of heat or direct sunlight.  
**DO NOT** store in the glove compartment or boot of your car.  
**DO NOT** puncture or incinerate empty cartridges.

## HANDLING WHEN THE AUTOMATIC SAFETY SHUT-OFF DEVICE IS ACTIVATED

- When used in high temperature areas, such as the beach during summer or in a hot room, the internal pressure of the cartridge may rise to more than 7Kg/cm<sup>2</sup> (normal pressure = 3-4Kg/cm<sup>2</sup>) This will activate the Automatic Safety Shut-off Device inside the regulator.
- Remove the Gas Cartridge from the compartment. Push the nozzle inward to release internal pressure and place in a cool or shady area.
- Turn the Ignition Knob to 'ON' to release any excess gas inside the regulator. Repeat the 3 steps for inserting the gas cartridge after it has cooled down.

## PARTS LIST

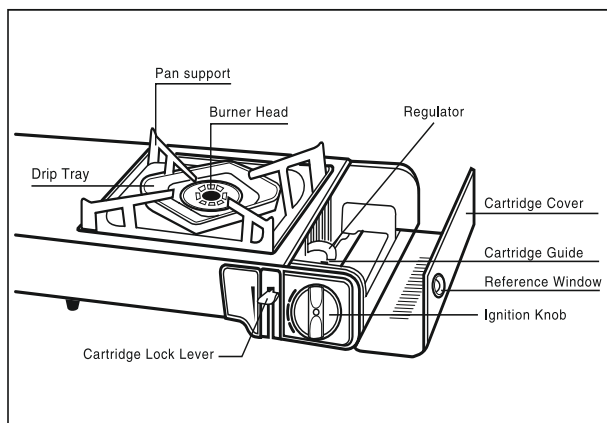

## WARNING

THE OPENINGS AT THE BASE OF THE BURNER PROVIDE AIR FOR COMBUSTION, THEY SHOULD NEVER BE OBSTRUCTED. IF THE FLAME BECOMES SIGNIFICANTLY ORANGE CHECK THESE OPENINGS FOR A BLOCKAGE.

IF THE APPLIANCE CANNOT BE ADJUSTED TO PERFORM CORRECTLY IT SHOULD NOT BE USED UNTIL SERVICED OR REPAIRED.