

STOVE 1-2-3 FIRE

OPERATION AND SAFETY SYSTEM

- The article listed above operate with low pressure BUTANE or PROPANE with pipe and normalized pressure reducer at 28m.bar for butane and 37 m.bar for propane.
- The appliance and gas cylinder must be placed on flat surface sheltered from the wind, away from any materials which may be inflammable.
- Protect gas cylinders from direct sunlight. Never keep them in the house, airless places or underground.
- Ensure that the hose is never taut or pinched and that it is not in contact with hot surface.
- Repairs and maintenance should be carried out only by qualified personnel.
- Modifications to appliance may be dangerous.

-USE IN THE OPEN AIR, AWAY FROM FLAMES OR HEAT SOURCES.

- The air necessary of combustion is 2.0 m³/hr. For every kw of maximum installed heating power.
- Turn off the tap on the cylinder when the appliance is not in use.

REMARK: KEEP CHILDREN AWAY FROM THE APPLIANCES IN USE.**FITTING AND REPLACEMENT OF GAS CYLINDER**

To attach the appliances you need: a standard camping gas cylinder of not less than 3kg.

- * Pressure regulator gauged on 1.5 kg/hr., maximum operating pressure 28/37 m.bar.
- * Adequate length of hose (max 1.5 metres), fitted so as to remain unbent.
- * Gas leak detector spray or any other suitable foaming agent.

PROCEDURE

- * Turn off the top on cylinder;
- * Attach the pressure regulator to the gas cylinder;
- * Ensure that the stove knobs are all off;
- * Fit the hose to regulator and the attachment on the rear of the stove secure the two ends of the hose with hose clamps.

N.B. the hose must comply with UM CIG 7140 Standards and be no longer than 1.5 metres, in case of gas escape close the gas cylinder and let the appliance be checked by qualified personnel.

PRELIMINARY OPERATIONS

- * Check that the appliance is in a safe position
- * Check that the removable parts are all properly in place
- * Check that the gas cylinder is properly connected
- * We recommend to use protective gloves to handle any hot element
- * Check that the cylinder is at least 50 cm from the appliance
- * **DO NOT USE THE STOVE INDOORS**

IGNITION

- * Turn on the gas cylinder by turning the valve anticlockwise
- * To ignite the required burner, push in and turn the relevant knob anticlockwise to maximum
- * Take a lit match up to the burner
- * When the burner has ignited, regulate the flame as required
- * When cooking is over, turn the knob to the OFF

**TURN OFF THE GAS CYLINDER WHEN YOU HAVE FINISHED TO USE THE APPLIANCE
USE THE PANS**

Ensure that the flame remains under the bottom of the pan and doesn't lap the sides
Recommended pan size diameter 14-18cm

MAINTENANCE

- 1) Wait until the appliance is cold before cleaning
- 2) Use a sponge with water and a suitable detergent
- 3) Do not use abrasive products
- 4) To clean the burners with very little water and detergent and dry immediately
- 5) After the cleaning operation make sure the holes on the cap are not clogged
- 6) If necessary, dismantle the burner
- 7) If the Venturi pipe is blocked, dismantle the burner and clean a jet into the pipe until the blockage is removed.