GB

Type K35 DOUBLE STAGE 1.5kg/h

FIXED REGULATOR COMPLIANT WITH STANDARD EN 12864

For quick connection cylinder diameter 35mm(G.56)

For Propane, Butane and LPG

LONGTIME

CE 0051

Operating instruction to be kept by the user

Read carefully before using

Technical information

-Input pressure: 0.3-16 bar
-Expansion pressure: 29 mbar (written on the label)
-Maximum capacity: 1.5 kg/h (written on the label)
-Outlet connection: H.50-H.51-H.4-H.6 of EN12864 (G1/4" - left hand thread)
-Type of gas: Propane, Butane and LPG (written on the label)

FIG.1

1. Installation and operation instructions

-K35 is a domestic regulator used to supply gas to utilities at specific pressure and flow as indicated on the label (1)-FIG.1

-K35 must be fitted directly to a cylinder featuring a 35mm(G 56), quick connection valve. Make sure the regulator inlet and outlet are compatible with the cylinder and the appliance being used.

-The gas cylinder must always be kept in vertical position. Do not move the cylinder during operation. When the device is used outdoors, it shall be positioned or protected against direct penetration by any tracking water.

-K35 versions featuring a release valve (the marking "PRV" is visible on the label (1)) are generally not type-approved for use in closed premised (see local laws on the subject).

-Never look for gas leaks with a live flame. Use instead a solution of water and soap.

-In the event of any faults being found, close the gas supply and immediately contact your gas supplier.

-This regulator is not for use in caravans and motor caravans.

FIG.2

2. Fitting the rubber hose (FIG.2)

-Connect the end of the hose (3) to the regulator outlet (5).
Fasten the hose. Do not over-tighten to prevent damaging the hose.

FIG.3

3. Fitting the regulator on the valve

Make sure that:
-All the taps of the user appliance are closed
-The rubber hose is correctly fastened to the regulator and user appliances.
-Make sure the handle is in the "off" position (this happens when on the handle is on the "off" side., FIG.3.
-Remove the plastic protective plug from the automatic valve
-Pull the ring (5) upwards as shown in FIG.3 and fit the K35 onto the angle valve. Afterwards give the ring (5) a strong push downwards as shown in FIG.4. A "click" should be hard, meaning the regulator has been correctly fitted.

FIG.4

4. Operation

OPEN (on): after correctly fitting the regulator onto the valve, the gas flow can be opened by turning the knob from left to right, as the arrow showed in (FIG.5). In this position, word "on" is visible. In this position the valve is opened and the gas flow is allowed.

CLOSED (off): The gas flow can be stopped by turning the knob to word "off" side. As the arrow showed in (FIG.6). In this position the valve is closed.

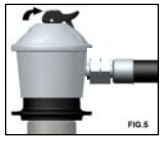
FIG.5

5. Replacing the gas cylinder(FIG.6)

Make sure that:
-All the taps o the user appliance are closed
-The opening knob of the K35 is in the closed position.
Afterwards, remove the regulator by pulling the ring (5) as shown in FIG.6.
NOTE: it is not possible to pull the ring until the knob is in the mark " on "size. This is an important security feature. The user must not try to pull the regulator ring if the knob is not in the " off " position. Please contact your supplier if you have any problem.

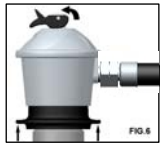
FIG.6

6. Replacing the hose

- Close the regulator - handle is on position "OFF"
- Connect the rubber hose properly with the regulator and the appliance.
- Make sure it is tightly secured.
- Open the regulator - handle is on position "ON"
- Check for gas leaks using a soap solution (if there are any bubbles, it means that there is a gas leak)

Warnings!

Important! The hose should be with a maximum length - 1.5m (maximum efficiency of gas flow).
Make sure to check the hose periodically if it needs to be replaced due to wear.

Important! In normal conditions of use, in order to ensure the correct operation of the installation, it is recommended that this regulator is changed within every 5 years.

BG

Модел K35 - за ниско налягане, двоен 1.5kg/h

Редуцир-вентил отговарящ на стандарт EN 12864 - G56
За газ Пропан, Бутан и LPG

LONGTIME

CE 0051

Инструкции за употреба

Прочетете внимателно преди употреба

Техническа информация

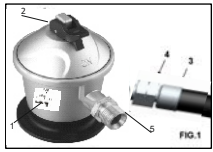

- Входящо налягане : 0.3-16 bar
- Изходящо налягане: 29mbar (обозначено на стикера)
- Максимален капацитет - 1 кг/час (обозначено на стикера)
- Изходна връзка: H.50-H.51-H.4-H.6 от En12864 (G1/4" - лява резба)
- Видове газ: Пропан, Бутан и Пропан-бутан (обозначено на стикера)

1.Инсталация и инструкции за употреба

- K35 е редуцир-вентил се използва да захранва уреди с газ, при определено налягане и поток на газта (фиг.1).
- K35 трябва да бъде свързан доректно с газовата бутилка посредством 35мм (G56) вентил. Уверете се, че входа и изхода на редуцир-вентила са съвместими с уреда и бутилката.
- Газовата бутилка трябва винаги да бъде във вертикална позиция.

Важно! Не местете бутилката по време на работа с уреда. Пазете устройството от вода при употреба навън.

- K35 не е предназначен за употреба в затворени помещения. (проверете местните закони)
- Никога не проверявайте за теч на газ с пламък. Използвайте сапунен разтвор за тази цел.
- Ако се съмнявате за теч или повреда, незабавно спрете притока на газ и позвънете на вашия доставчик.
- Този редуцир-вентил не е предназначен за употреба в каравани.

2. Поставяне на гумения маркуч (фиг.2)

- Свържете маркуча (3) с изхода (5) на редуцир-вентила. Затегнете маркуча (4). Не го пренатягайте за да избегнете повреда.

3. Поставяне на редуцир-вентила върху вентила на бутилката.

Уверете се че:

- Палецът на редуцир-вентила е на позиция OFF и е затворен.
- Гумения маркуч е коректно сложен и загетнат за редуцир-вентила и на съответния уред.
- Дръпнете пръстена (5) нагоре, както е показано на фиг.3 и поставете редуцир-вентила на бутилката. След това натиснете силно пръстена (5) надолу, както е показано на фиг.4. Щракването трябва да е силно, което означава, че сте поставили редуцир-вентила коректно и безопасно.

4. Употреба

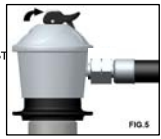

След коректното поставяне на редуцир-вентила можете да пуснете притока на газ, като обърнете палеца от ляво надясно, както е показано на фиг.5. На позиция - "ON" редуцир-вентилът е отворен.

- Притока на газ спирате, като отново върнете палеца на първоначалната му позиция (от дясно на ляво) – "OFF" – редуцир-вентилът е затворен.

5.Смяна на газова бутилка (фиг.6)

Уверете се че:

- Редуцир-вентилът е затворен – палеца е на позиция "OFF"
- Махнете редуцир-вентила, като дръпнете пръстена (5), както е показано на фиг.6

Внимание: пръстена няма да се освободи, ако палеца на редуцир-вентила е отворен "ON". Това е важна предпазна мярка. Не се опитвайте да освободите редуцир-вентила от бутилката, ако не сте го затворили.

6. Смяна на маркуча:

- Затворете редуцир-вентила – палеца на позиция "OFF"
- Поставете гумения маркуч правилно към редуцир-вентила и уреда.
- Уверете се, че е добре затегнат.
- Отворете редуцир-вентила – палеца на позиция "ON"
- Проверете за теч на газ, като използвате сапунен разтвор (ако има мехурчета, това означава че има теч на газ)

Важно! Маркучът трябва да е с дължина 1.5м максимум (за максимална ефикасност на приток на газ) и да се проверява периодично дали има нужда от смяна поради износване.

Важно! Препоръчително е да сменяте редуцир-вентила на всеки 5 години, за максимална сигурност и безопасност.